



Safety Instructions

***for Installation, Operation and
Maintenance of Knife Gate Valves Series
ABO 200 and ABO 300***



CAUTION

1. All safety instructions should be read carefully; otherwise all manufacturer's warranties become null and void. All installation work and activities during the operation or removal of the valve must be performed by professionally trained staff. The manufacturer is available for any questions – see contact details.



DANGER TO LIFE

2. The valve may only be used if the medium pressure and temperature parameters comply with the type specifications for the type of valve concerned.



DANGER TO LIFE

3. It is necessary to ensure that the material of valve components that comes into contact with the transported medium is suitable for the medium concerned.



DANGER TO LIFE

4. Before dismantling the valve from the piping, the piping must be without pressure both before and after the valve. (Risk of uncontrollable leak of fluid).



DANGER

5. Using levers or similar devices that allow exceeding the control torque is not permitted while controlling the valve.




WARNING

6. Before installing the valve, the flanges and the interior of the piping must be free of scale, slag, etc.



7. Valves are to be assembled in pipelines with steady flow. Please be aware of general conditions for stabilizing the flow upstream of the valve (e.g. pump, other valve) which causes turbulences (usually 6xDN, but it depends on specific conditions which are specified by the designer engineer).

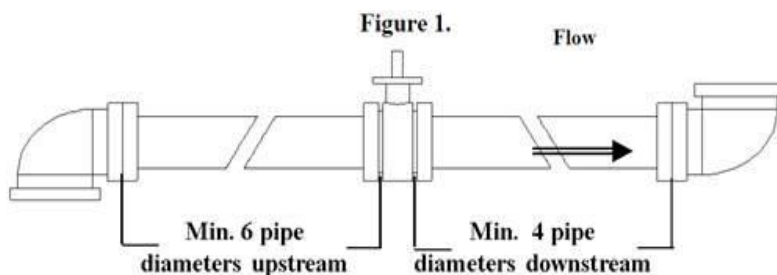

Other Information

These regulations as well as other above-mentioned documents and further information – also in other languages – are available at www.abovalve.com or at the following address:

ABO valve, s.r.o.
Dalimilova 285/54
783 35 Olomouc
Czech Republic

Tel: 00420 585 223 955
Fax: 00420 585 223 984
abovalve@abovalve.com
www.abovalve.com

Last revision: 27th August 2017